

## INDICATO BATTERY STATUS DISPLAY

The INDICATO battery status display was developed for easy installation in the TEMO 200 and TEMO 600 tiller heads and the AURIGO steering wheel, the installation dimensions correspond to those of the T switch range. This useful display has 3 LEDs which provide information about the current battery status of the connected 24 V traction battery at a glance.


The three-colour LED scale (green, yellow, red) indicates the different voltage ranges > 22.4 V (green), 21 V to 22.4 V (yellow) and < 21.0 V (red). The INDICATO battery status display is available in two marking versions: battery symbol at the top and battery symbol in the centre.


- Design matches the TEMO 200 and TEMO 600 tiller heads and AURIGO 200 multifunctional steering wheel
- · Wear-proof laser marking
- · Battery status display
- Operation temperature -40°C to +85°C





## Mounting hole [mm]

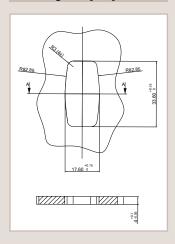

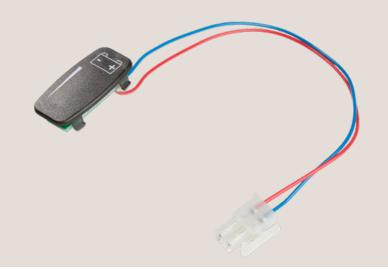

Technical data		
Electric interface		
Voltage supply (Ub)	6.5 to 27 VDC	
Input current	Max. 25 mA	
Connector system	Molex Mini-Fit Jr. 2-pin	
Display		
Green LED	> 22.4 V	
Yellow LED	21.0 V to 22.4 V	
Red LED	< 21.0 V	
Operating conditions		
Operating temperature range	-40°C to +85°C	
Protection class according to	IP 54 (except for the	
EN 60529	connector)	

Connector pin assignment Molex Mini-Fit Jr. 2-pin	
PIN number	Function
PIN 1	+Ub
PIN 2	GND

Order data	
Part No.	Designation
3203-00150-00	Battery status display (battery symbol printed at the top – for TEMO 200 and TEMO 600)
3203-A0150-00	Battery status display (battery symbol printed in the centre – for AURIGO 200 multifunctional steering wheel)

## Dimensions [mm]

