



MEMODONGLE

This memory module can be connected to an RS-232 interface on a PC or a machine. It is used for transferring operating systems or software updates from a PC to the machine control system (terminal).

The module contains a Serial Flash memory chip with a defined amount of storage space. Power is supplied on the PC via the control wires of the RS-232 interface.